

LDG AT-1000ProII 1000W Automatic Antenna Tuner



LDG Electronics, Inc.

1445 Parran Road
St. Leonard MD 20685-2903 USA
Phone: 410-586-2177
ldg@ldgelectronics.com
www.ldgelectronics.com

Table Of Contents

Introduction	3
Jumpstart, or “Real hams don’t read manuals!”	3
Specifications	4
An Important Word About Power Levels	4
Important Safety Warning	4
Getting to know your AT-1000ProII	5
<i>Front Panel</i>	<i>5</i>
<i>Back Panel</i>	<i>6</i>
Installation	7
Basic Operation	7
<i>Using the Front Panel Buttons</i>	<i>7</i>
<i>User Configuration Options</i>	<i>10</i>
<i>Transmitting and Receiving</i>	<i>10</i>
Tuning	10
<i>Basic Tuning Operation</i>	<i>10</i>
<i>Manual Memory Tune</i>	<i>11</i>
<i>Manual Full Tune</i>	<i>11</i>
<i>Bypass Mode</i>	<i>12</i>
<i>Error Indication</i>	<i>12</i>
Advanced Operation	14
<i>Manual Inductor/Capacitor Adjustments</i>	<i>14</i>
<i>High/Low Relay Adjustment</i>	<i>14</i>
<i>Manual Memory Store</i>	<i>14</i>
<i>Status Check</i>	<i>15</i>
Application Notes	16
<i>Mobile Operation</i>	<i>16</i>
<i>Internally Generated RF Noise</i>	<i>16</i>
<i>MARS/CAP Coverage</i>	<i>16</i>
<i>Operation with LDG Electronics M-1000 External Meter</i>	<i>16</i>
<i>Tuning Hints</i>	<i>16</i>
Theory of Operation	17
<i>Some basic ideas about impedance</i>	<i>17</i>
<i>Transmitters, transmission lines, antennas, and impedance</i>	<i>18</i>
The LDG AT-1000ProII	20
Quick Reference	21
A Word About Tuning Etiquette	22
Care and Maintenance	22
Technical Support	22
Two-Year Transferrable Warranty	22
Out Of Warranty Service	23
Returning Your Product For Service	23
Product Feedback	23

INTRODUCTION

LDG pioneered the automatic, wide-range switched-L tuner in 1995. From its laboratories in St. Leonard, Maryland, LDG continues to define the state of the art in this field with innovative automatic tuners and related products for every amateur need.

Congratulations on selecting the LDG Electronics AT-1000ProII 1000 Watt Automatic Tuner. The AT-1000ProII provides full and semi-automatic antenna tuning across the entire HF spectrum plus 6 meters, at power levels up to 1000 watts (250W on 6m). It will tune dipoles, verticals, Yagis, or virtually any coax-fed antenna. It will match an amazing range of antennas and impedances, far greater than some tuners you may have considered, including the built-in tuners on many transceivers.

The AT-1000ProII is designed to handle 1000 watts of output power and is ideal for use with small outboard linear amplifiers rated up to 1000 watts, or even newer high-power transceivers.

JUMPSTART, OR “REAL HAMS DON’T READ MANUALS!”

Ok, but at least read this one section before operating the AT-1000ProII:

1. Connect a 50 ohm coax jumper cable from the antenna jack on the amplifier to the **TX** jack on the rear of the AT-1000ProII. (This cable must be rated to 1000 watts.)
2. Connect the antenna’s 50 ohm coax feedline to the **ANT 1** jack on the rear of the AT-1000ProII.
3. Connect the supplied DC power cable to the jack marked **12 VDC**. Connect this cable to a DC source between 11-16 volts DC, 1000 mA. The jack center tip is positive.
4. Power up the transceiver and select the desired operating frequency and mode.
5. Bypass the amplifier.
6. Make sure Antenna 1 is selected (**ANT 2** LED is off). Press **ANT** to toggle.
7. Begin transmitting, any mode¹.
8. When the tuning cycle is complete, activate the amplifier, and you’re ready to operate!

Note: *If using an amplifier, we recommend to operate the AT-1000ProII in semi-automatic tuning mode to avoid re-tuning at high power levels.*

¹ In SSB mode, simply speak into the microphone while transmitting. Tuning may be performed at up to 125 watts of input power, provided that the transceiver employs a “roll-back” circuit to protect it from high SWR. For transceivers without roll-back circuits, power should be limited to 25 watts when tuning, to avoid damage to the transmitter or tuner.

SPECIFICATIONS

- Transmit Power Limits: SSB: 1000 watts; CW: 750 Watts; FT-8: 600 watts; PSK and other Digital Modes: 500 Watts; 6 Meters: 250 Watts.
- Teflon SO-239 connectors.
- Over 4,000 memories for instantaneous band changing.
- Built-in 2-port antenna switch, with 2,000 memories each.
- Tuning time 0.2 to 15 seconds full tune, 0.2 seconds memory tune.
- 1.8 to 54.0 MHz coverage. Built-in frequency sensor.
- Tunes 6 to 1,000 ohm loads (16 to 150 on 6m).
- LED bargraph displays power level, SWR, and status.
- Antenna Indicator LED shows the currently selected antenna.
- Bypass LED shows when tuner is in pass-thru.
- User-selectable operating parameters: Auto/Semi, 1000W/100W scale, and more.
- DC power cable included.
- Power requirements: 11 to 16 VDC @ 1A max.
- Dimensions: 11.5"L x 9.75"W x 3.25"H
- Weight 4 pounds, 5 ounces.

AN IMPORTANT WORD ABOUT POWER LEVELS

The AT-1000ProII is rated at 1000 watts maximum power input at most. Many amplifiers output well over 1000 watts. Power levels that significantly exceed specifications will damage or destroy your AT-1000ProII. If the tuner fails during overload, it could also damage your transmitter, amplifier, or transceiver. Be sure to observe the specified power limitations.

IMPORTANT SAFETY WARNING

Never install antennas or transmission lines over or near power lines. You can be seriously injured or killed if any part of the antenna, support, or transmission line touches a power line. Always follow this antenna safety rule: The distance to the nearest power line should be at least twice the length of the longest antenna, transmission line, or support dimension.

GETTING TO KNOW YOUR AT-1000PROII

Your AT-1000ProII is a quality, precision instrument that will give you many years of outstanding service; take a few minutes to get to know it.

Front Panel

The front panel of the AT-1000ProII features eight pushbuttons, two LED bargraph scales, and three indicator LEDs:



Power: Turns the unit on or off. Power LED lights when the unit is on. When power is off, ANT 2 is selected, and unit is in bypass.

Func: Activates secondary function of other buttons.

Ant: Selects the active antenna port.

C Up: Manually increase capacitance.

C Dn: Manually decrease capacitance.

L Up: Manually increase inductance.

L Dn: Manually decrease inductance.

Tune: Initiates memory or full tuning cycle. Momentary push places tuner in bypass.

PWR Meter: Bargraph display indicates forward power in 0-100 and 0-1000 watt ranges.

SWR Meter: Bargraph display indicates SWR during tuning or transmission.

Bypass LED: Indicates Bypass mode is active.

ANT 2 LED: Lights when Antenna 2 is selected. Off when Antenna 1 is selected.

Each of the pushbuttons has the primary function listed above when pushed. Additionally, pressing the **FUNC** button before pressing any other button will activate that button's secondary function.

The power button on the AT-1000ProII places the tuner in bypass and enters a low-power sleep mode, rather than turning the unit fully off. Press and hold the Power button for 3 seconds to put the unit into low-power sleep mode. Press momentarily to turn the unit on.

Rear Panel

The rear panel of the AT-1000ProII has seven jacks.



- **Ant 1:** Connect a 50 ohm antenna coax feedline to this SO-239 connector. This jack is automatically disconnected when the AT-1000ProII is turned off.
- **Ant 2:** Connect a 50 ohm antenna coax feedline to this SO-239 connector. This antenna jack is active when the **ANT 2** LED is lit on the front panel. When the unit is turned off, the jack is active, and the tuner is in bypass.
- **Gnd (wing nut):** Connect to the antenna system ground.
- **Tx:** Connect a 50 ohm jumper coax from this jack to the ANT jack on the rear of the amplifier.
- **Ext. Meter:** Connect the discontinued LDG M-1000 External Meter to this jack.
- **Radio:** (optional) Connect the optional radio interface cable, not recommended when using amplifier.
- **Power:** Connect the supplied DC coaxial power cable to this connector and connect to a source of 11-16 VDC @ 1A. The center pin is positive.

INSTALLATION

The AT-1000ProII is intended for indoor use only; it is not water-resistant. If you use it outdoors, (Ex: Field Day) you must protect it from weather. The AT-1000ProII is designed for use with coax-fed antennas. If use with longwires or ladder-line-fed antennas is desired, an external balun rated to 1000 watts is required.

Place the AT-1000ProII in a convenient location near the transceiver and amplifier. Always turn your radio and amplifier off before plugging or unplugging anything. The radio may be damaged if cables are connected or disconnected while the power is on.

Connect the HF antenna jack on the amplifier to the **TX** jack on the back of the AT-1000ProII, using a 50 ohm coax cable rated 1000 watts or higher.

Connect the 50 ohm antenna feedline coax to the **ANT 1** jack on the back of the AT-1000ProII, and optionally connect a second antenna feedline to the **ANT 2** jack. **NOTE: ANT 1** is automatically disconnected from the radio when the unit is powered off. **ANT 2** remains active when the unit is powered off, and the tuner is in bypass.

Grounding the AT-1000ProII tuner will enhance its performance and safety. LDG recommends that you connect your tuner to a suitable ground. A common ground rod connected to buried radials is ideal, but a single ground rod can provide a serviceable ground. LDG strongly recommends the use of a properly installed, high quality lightning arrestor on all antenna cables.

BASIC OPERATION

Using the Front Panel Buttons

All operations of the AT-1000ProII are controlled via the front panel buttons. Although there are a total of eight buttons on the front panel, there are more than eight functions that can be carried out on the AT-1000ProII. To accommodate the many functions of the AT-1000ProII, the operation performed by pressing a particular button is determined by the manner in which the button is pressed, and no operation begins until the button is actually released.

The various types of button presses are described here:

Momentary or short press: The button is pressed and released immediately.

Medium Press: The button is held for one-half to 2.5 seconds, and then released.


Long Press: The button is held for more than 2.5 seconds, and then is released.

User Configuration Options


The AT-1000ProII offers several user-settable options that allow the behavior of the tuner to adapt to many different operating circumstances. Most of these options are accessed by placing the tuner in **Function** mode, which is done by pressing and releasing the **Func** button, and then pressing the desired button to activate the configuration option while in function mode.

To confirm entry into **Function** mode, the AT-1000ProII will flash an “up arrow” on the LED display after the **Func** button is pressed.

Function mode times-out after a few seconds if no other button is pushed. Alternately, function mode can be cancelled by pressing the **Func** button again. In either case, when Function mode is exited, a “down arrow” is displayed on the LED display:

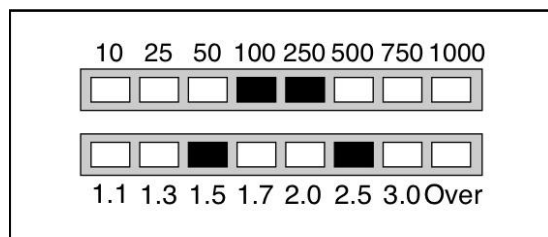


Function Mode On

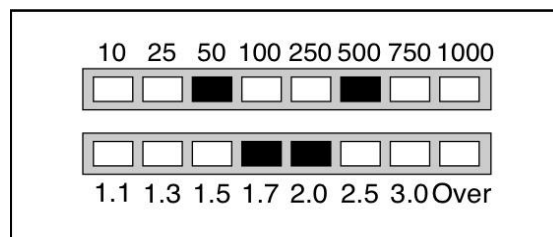

Function Mode Off


Peak Mode On/Off: The Power display on the LED bargraph can display either average power or peak forward power, in watts. Average mode is suitable for 100% duty cycle modes such as FM, RTTY, or PSK. Peak mode is more useful on modes with varying duty cycle such as SSB or AM. The factory default is average mode.

To toggle between power display modes, press **Func** -> **C Up** (Press and release **Func**, then press and release **C Up**). Peak mode is indicated by a falling meter display, with the highest power shown as a steady LED while the remaining LEDs fall back to zero. Average mode shows the same display, but without the steady LED showing. Press **Func** -> **C Up** repeatedly to toggle between Peak and Average modes.

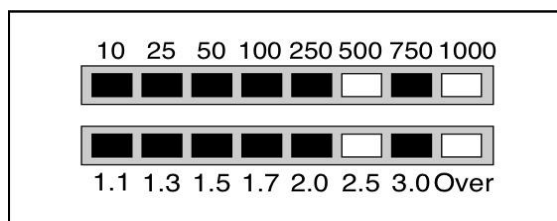


Peak Mode

Wattmeter Scale: The Power LED bargraph displays either 0 to 100 watts or 0 to 1000 watts full scale. To toggle between these two scales, press **Func** -> **L Up**. The LED marked “100” or “1000” will light momentarily to indicate the newly selected scale.

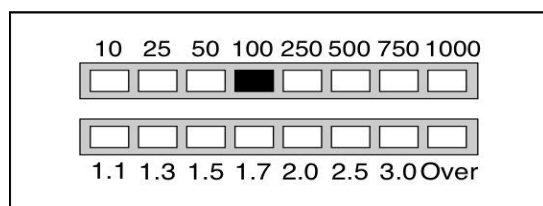


100 Watt Scale

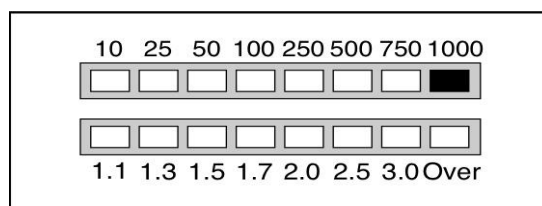


1000 Watt Scale

Automatic Tuning Mode: The AT-1000ProII may be set for either semi-automatic tuning or fully automatic tuning. In semi-automatic tuning mode, a tuning cycle will not begin unless specifically requested by pressing the **Tune** button. In fully automatic tuning mode, a tuning cycle will begin any time there is RF present and the SWR exceeds a pre-set level. The default setting is fully automatic tuning mode.

To toggle between semi- and fully automatic modes, press **Func -> C Dn**. The LED display will show one of the two patterns to indicate which mode has been selected:

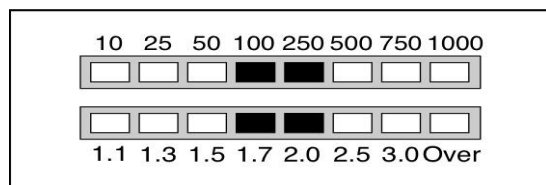


Auto Mode

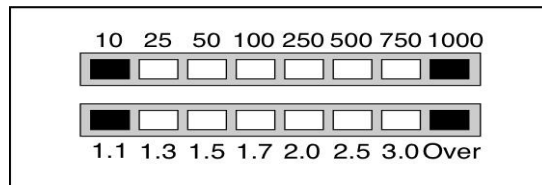

Semi Mode

Automatic Tune SWR Threshold: When the AT-1000ProII is in fully automatic tuning mode, an automatic tuning cycle will begin any time RF is present and the SWR has exceeded a set threshold. This threshold is user-programmable to any value between 1.7:1 and 3.0:1. To set the automatic tune SWR threshold, press **Func -> L Dn** repeatedly (press **Func**, then **L Dn**; **Func**, then **L Dn**, and so on...) to cycle through all the options. The SWR threshold will be displayed on the SWR scale momentarily.

The default value of SWR threshold is 1.7:1. The following example shows setting the SWR threshold to 1.7:1.

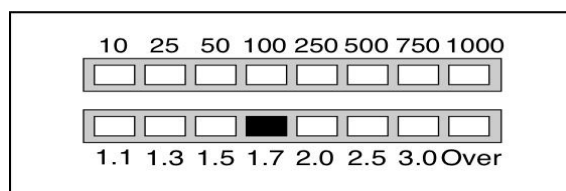

Auto Threshold

Antenna Selection: Press the **Ant** button momentarily to toggle which antenna port is currently active. The **ANT 2** LED will light when Antenna 2 is selected and is off when Antenna 1 is selected. When toggling the antenna selection, the previous tuning settings for the newly selected antenna are also recalled. This is useful when comparing antenna performance on the same frequency.

Transmitting and Receiving

During receive operation, only the antenna and bypass indicator LEDs are lit on the AT-1000ProII. During transmit, the forward RF power level is displayed on the PWR bargraph, and the SWR is displayed on the SWR bargraph.

When reading the SWR bargraph, an illuminated LED on the graph means “The SWR is at least this much.” In other words, if the 1.3 LED is lit, it means that the SWR is between 1.3 and 1.5:1. No LEDs lit means the SWR is less than 1.1:1.

The **Bypass** LED lights any time that all the internal relays are in their de-energized state, meaning that no inductance or capacitance is being added to the antenna system by the tuner.

TUNING

Basic Tuning Operation

A tuning cycle on the AT-1000ProII is initiated from either the **Tune** button on the front of the AT-1000ProII, or an over-SWR condition when in fully automatic tuning mode

A **memory tuning cycle** attempts to tune quickly, based on having previously tuned on the present frequency selection. If the tuner previously was successful in tuning on the currently selected frequency, the settings from that match will be loaded into the tuner relays, and checked to see if an acceptable SWR level is found using these memorized settings.


Memory frequency step sizes vary with the selected band. Steps are very close together on the lower bands, to accommodate the typically higher-Q antennas for those bands, while step size is somewhat larger on the higher (17 meters and up) bands, where antenna Q is typically lower.

A **full tuning cycle** “starts from scratch,” and begins a fixed tuning sequence, where the AT-1000ProII rapidly tries varying combinations of inductance and capacitance values, and then zeroes-in on the best match possible. When the tuning cycle is complete, if an acceptable match was found, the inductance and capacitance settings are saved in a memory associated with the selected frequency and antenna, so that they may be recalled quickly in the future via a memory tuning cycle.

In this manner, the AT-1000ProII “learns;” the longer you use it, the more closely it adapts itself to the bands and frequencies you use. Most users will probably use memory tuning most of the time; it takes advantage of any saved tuning settings, but automatically defaults to a full tuning cycle if no stored data is available.

Manual Memory Tune

To initiate a memory tuning cycle at any time, first, bypass the amplifier². Press and hold the **Tune** button for 0.5 to 2.5 seconds (medium button press) and release. The LED bargraph display will show the following pattern to indicate a memory tune cycle is selected:

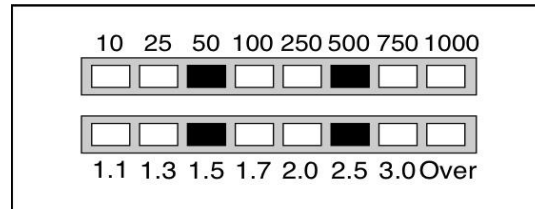


Medium Press > 0.5 sec

If the memory tune is not successful, the AT-1000ProII defaults to the full tuning cycle. At the end of a tuning cycle, the LEDs cycle inwards to indicate a successful tune. You may then activate the amplifier and begin transmitting.

Manual Full Tune

As with the memory tuning cycle, if your radio is not equipped with a rollback circuit, reduce power to 25 watts or less before tuning. To explicitly initiate a full tuning cycle, while transmitting, press and hold the **Tune** button on the AT-1000ProII front panel for more than 2.5 seconds. The LEDs will display the following pattern to confirm a full tuning cycle is requested:

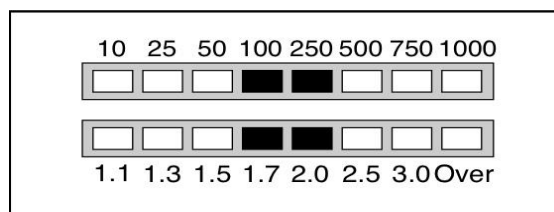

Long Press > 2.5 sec

After seeing the pattern above, release the tune button and the unit will tune.

² Note that, while the AT-1000ProII employs software that prevents it from tuning while transmitting over 150 watts, it is still a good idea to bypass your amplifier while tuning, as further protection against damage to the tuner.

Bypass Mode

The AT-1000ProII may be placed in bypass mode by pressing the **Tune** button momentarily (less than 0.5 second). Bypass places the tuner in a pass-thru configuration, where the tuner behaves like a coax jumper, not affecting the antenna match. When placed in Bypass Mode, the Bypass LED will light and the AT-200ProII is automatically put into Semi-Automatic Tuning Mode. Bypass may be useful for comparing the effect of the AT-200ProII's tuning versus the unmatched antenna system. Pressing **Tune** momentarily again will take the unit out of Bypass Mode (the LED will no longer be lit), and the relay settings of the previous match will be restored. The tuner will still be in Semi-Automatic Tuning Mode until you reset it to Automatic Tuning mode.

Error Indication

When performing a tuning cycle, there are several conditions that may occur that cause the tune to fail. All are reported as an error, via blinking the front panel LEDs in a particular fashion. The following errors are reported:

ERR_NO-Match: Unable to find a suitable match. Upon completing an entire full tuning cycle, no combination of inductors and capacitors was able to bring the SWR below 3.5:1.


ERR_NO_RF: No RF power was present at the beginning of a tuning cycle. In other words, the **Tune** button was pressed to request a tune cycle, but the transmitter was not keyed up.

ERR_LOST_RF: RF power disappeared before the tuning cycle was completed. You must continue to key the radio until the tuning cycle completes.


ERR_NO_FREQ: Unable to determine operating frequency. To store a memory match, the frequency of the transmitted RF must be known.

ERR_OVER_PWR / ERR_SWR_PWR: Relay protection activated. Because the relays may be damaged if they are switching during high power operation, software prevents the relays from toggling under certain conditions. Relays will not toggle if the SWR is over 3.0:1 and the power is over 100 watts and will not toggle if the power is over 150 watts regardless of the SWR.


The diagrams below show what the various error indications look like.

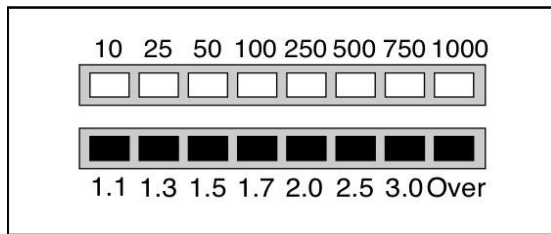


ERR_NO_MATCH: SWR
LEDs blink twice

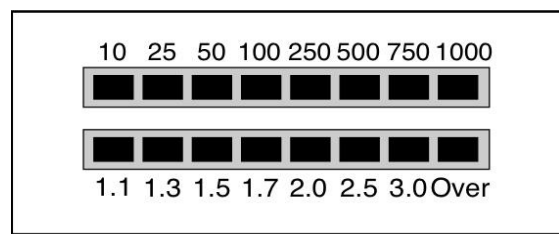


ERR_NO_FREQ:
All LEDs blink twice

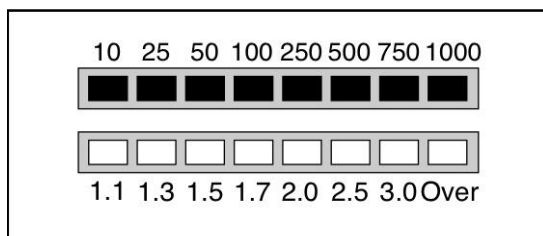

ERR_NO_RF: Blink Once
ERR_LOST_RF: Blink twice

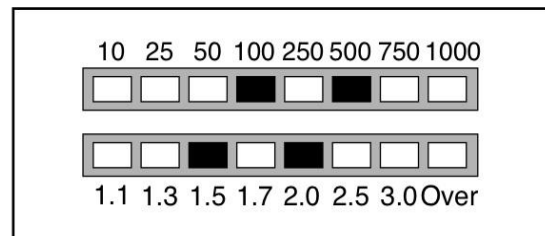


ERR_OVER_PWR:
Center LEDs toggle

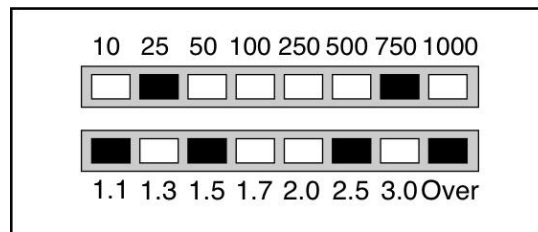

ERR_SWR_PWR: Outer
LEDs toggle

Additionally, if the forward power exceeds the maximum value selected for the meter scale, the PWR LEDs will blink an over-range condition. The four right-most LEDs of the PWR bargraph will cycle during over-range.

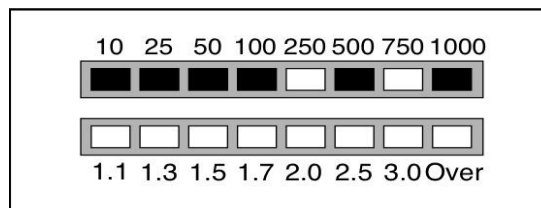

Meter Over-scale: Rightmost
4 LEDs toggle

Advanced Operation

Manual Inductor/Capacitor Adjustments


In some rare cases, after tuning, it may be desirable to adjust the inductance and capacitance settings that the AT-1000ProII came up with during the tuning process. This is more likely to occur when attempting to tune an antenna far from its resonant frequency.

The **C Up**, **C Dn**, **L Up**, and **L Dn** buttons may be used to increase or decrease the amount of capacitance or inductance, respectively. The momentary press of any of these buttons increases or decreases the value by one unit and displays the resulting value on the bargraph meter. Capacitance value is displayed on the PWR bargraph, and inductance on the SWR bargraph. These values are displayed in binary, left justified. The lowest-order relay is displayed on the leftmost LED. The rightmost LED on the PWR bargraph displays the state of the High/Low Impedance relay.


Repeatedly press one of these buttons to increase or decrease multiple times, or simply hold the button and the button will auto-repeat. You may also transmit while increasing or decreasing, so that the SWR value is displayed, but the capacitor and inductor values will not be displayed during transmit; instead, the power and SWR levels are displayed.

High/Low Relay Adjustment

In addition to being able to manually control the inductor and capacitor value of the AT-1000ProII, it is also possible to manually set the high/low impedance relay, which determines whether the tuner is an L-C configuration or a C-L configuration. To toggle the state of the high/low impedance relay, press **Func -> Ant**. The LED bargraph will display one of two patterns to confirm the setting.

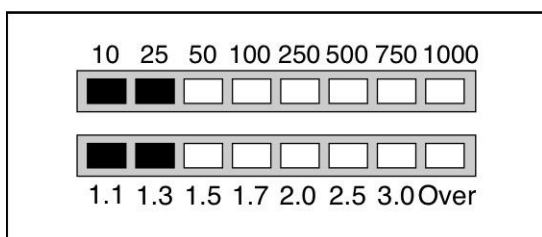

Low Impedance

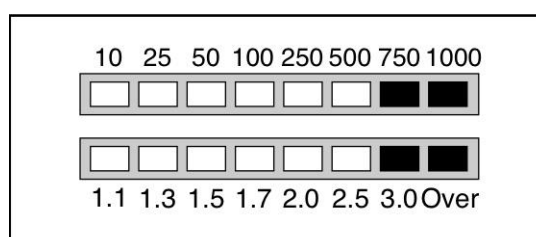

High Impedance


Manual Memory Store

Once manual adjustments are complete, press **Func -> Tune** (that is, press **Func** momentarily, then **Tune** momentarily) to store the current relay settings in the memory associated with the frequency last transmitted upon.

Status Check

The status of most user settings can be checked by pushing and *holding* the **Func** button while pressing the relevant button for that setting. For example, to check to see what the current SWR threshold value is, without changing the value, press and hold the **Func** button, and while still holding the **Func** button, press the **L Dn** (Thresh) button. The display will show the currently selected SWR threshold value.

While holding the **Func** button, the bargraph display will show the following pattern, to indicate that the AT-1000ProII is waiting for you to push a button to check its status:

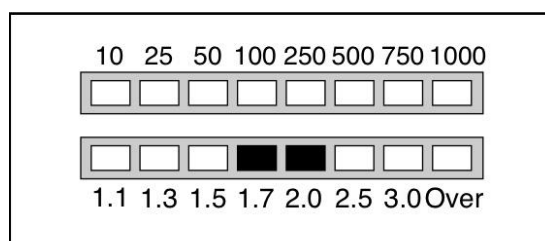

Function Hold

The following status items can be checked:

<i>Func Hold + This button</i>	<i>Status check</i>
C Up / Peak	Display Peak/Avg setting
C Dn / Auto	Display Auto/Semi setting
L Up / Scale	Display Power meter scale
L Dn / Thresh	Display SWR tuning threshold
ANT / HiLoZ	Display High / Low Impedance

APPLICATION NOTES

Mobile Operation

The AT-1000ProII is perfectly suited to mobile operation. It can be installed under the dashboard along with the transceiver or mounted remotely. The only requirements are that the tuner remains dry, and that the power source is fused appropriately. A 2 amp “fast blow” fuse is recommended.

With the AT-1000ProII mounted, for example, in the trunk, simply set the AT-1000ProII for fully automatic mode. It will automatically tune any time the SWR exceeds the preprogrammed threshold. Although the LED display will not be visible in the trunk of the car, your transceiver’s built-in SWR meter will show the tuner’s progress. Remember to keep your eyes on the road, however! In most cases, a match will be recalled from memory, so the SWR will snap to a low value as soon as you begin to transmit.

Internally Generated RF Noise

The AT-1000ProII is microprocessor controlled, and as such, generates a small amount of RF noise when the processor is active. Normally, the processor is only active during transmit operation, so the noise is not normally heard; however, if Peak mode is selected, the processor remains active for a moment after key-up, to allow the LEDs to settle back down to zero. You may briefly hear some noise in your receiver during this time. This is normal and is noticeable the most when using CW in full break-in, with Peak mode selected. In practice, this should not be much of a problem, as Peak mode is not very useful when using CW.

MARS/CAP Coverage

The AT-1000ProII provides continuous tuning coverage from 1.8 MHz to 54.0 MHz, not just inside the ham bands. This makes it useful for MARS or CAP operation, or any other legal HF operation.

Operation with LDG Electronics DISCONTINUED M-1000 External Meter

The AT-1000ProII has an external meter jack on the rear panel, which supports use of the Discontinued M-1000 External Meter. The M-1000 External Meter is an optional accessory for the AT-1000ProII that provides a large analog meter movement, and can be used to display Forward Power, Reflected Power, and SWR.

Be sure to turn off your AT-1000ProII before plugging in or unplugging the M-1000 External Meter.

The metered parameter displayed on the external meter need not be the same as the parameter selected for viewing on the AT-1000ProII’s built-in LED bargraphs, so it is possible to watch two parameters at once! Consult the M-1000 External Meter user manual for more details.

Tuning Hints

1.) The AT-1000ProII is designed to allow fully automatic tuning, which causes a tuning cycle to begin any time the SWR exceeds the user-selected threshold. However, tuning is not allowed when the forward power exceeds a level that could damage the relays. If the AT-1000ProII is left in fully automatic mode with the amplifier active, it is possible to begin a tuning cycle while transmitting high power in some circumstances, such as SSB transmission, where the power level begins at a low level and then increases with voice peaks.

Once the power level exceeds the relay protection threshold, the tuning cycle will stop, leaving the tuner in an un-tuned state. Because of this, LDG recommends switching the amplifier off before tuning, and then once tuning is complete, the AT-1000ProII should be switched to semi-automatic mode (**FUNC -> Auto**) for as long as the amplifier is active, to prevent re-tuning under high power.

2.) Some transceivers employ a fairly aggressive SWR roll-back circuit, which reduces transmit power under high SWR conditions. It is possible, on a particularly mismatched antenna, for the transmit power of the transceiver to be reduced so low that the frequency counter circuitry of the AT-1000ProII does not provide accurate information. For this reason, LDG suggests that you tune with 20 to 50 watts of transmit power if tuning seems erratic when transmitting with lower power levels. For many transceivers, this is a simple matter of switching the radio to AM or RTTY mode and keying the mic.

THEORY OF OPERATION



Some basic ideas about impedance

The theory underlying antennas and transmission lines is fairly complex, and in fact employs a mathematical notation called “complex numbers” that have “real” and “imaginary” parts. It is beyond the scope of this manual to present a tutorial on this subject³, but a little background will help in understanding what the AT-1000ProII is doing, and how it does it.

In simple DC circuits, the wire resists current flow, converting some of it into heat. The relationship between voltage, current, and resistance is described by the elegant and well-known “Ohm’s Law”, named for Georg Simon Ohm of Germany, who first discovered the principle in 1826. In RF circuits, an analogous but more complicated relationship exists.

RF circuits also resist the flow of electricity. However, the presence of capacitive and inductive elements causes the voltage to lead or lag the current, respectively. In RF circuits, this resistance to the flow of electricity is called “impedance”, and can include all three elements: resistive, capacitive, and inductive.

The output circuit of a transmitter consists of inductors and capacitors, usually in a series/parallel configuration called a “pi network”. The transmission line can be thought of as a long string of capacitors and inductors in series/parallel, and the antenna is a kind of resonant circuit. At any given RF frequency, each of these can exhibit resistance, and impedance in the form of capacitive or inductive “reactance”.

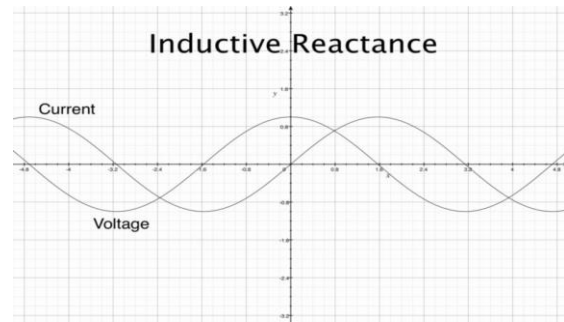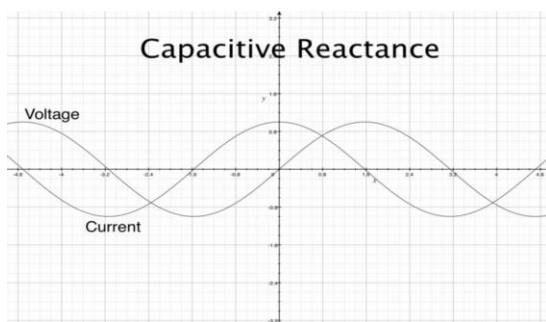

³ For a very complete treatment of this subject, see any edition of the ARRL Handbook for Radio Communications (previously the Handbook For Radio Amateurs).

Transmitters, transmission lines, antennas, and impedance

The output circuit of a transmitter, the transmission line, and the antenna, each have a characteristic impedance. For reasons beyond the scope of this document, the standard impedance is nominally 50 ohms resistive, with zero capacitive and zero inductive components. When all three parts of the system have the same impedance, the system is said to be “matched”, and maximum transfer of power from the transmitter to the antenna occurs. While the transmitter output circuit and transmission line are of fixed, carefully designed impedance, the antenna presents 50-ohm, non-reactive load only at its natural resonant frequencies. At other frequencies, it will exhibit capacitive or inductive reactance, causing it to have an impedance other than 50 ohms.

When the impedance of the antenna is different from that of the transmitter and transmission line, a “mismatch” is said to exist. In this case, some of the RF energy from the transmitter is reflected from the antenna back down the transmission line and into the transmitter. If this reflected energy is strong enough, it can damage the transmitter’s output circuits.

The ratio of transmitted to reflected energy is called the “standing wave ratio”, or SWR. An SWR of 1 (sometimes written 1:1) indicates a perfect match. As more energy is reflected, the SWR increases to 2, 3, or higher. As a general rule, modern solid state transmitters must operate with an SWR of 2 or less. Tube excitors are somewhat more tolerant of high SWR. If a 50 ohm antenna is resonant at the operating frequency, it will show an SWR close to 1. However, this is usually not the case; operators often need to transmit at frequencies other than resonance, resulting in a reactive antenna and a higher SWR.

$$SWR = \frac{1 + \sqrt{R/F}}{1 - \sqrt{R/F}} \quad \text{where } F = \text{Forward power (watts)}, R = \text{Reflected power (watts)}$$

SWR is measured using a device called an “SWR bridge”, inserted in the transmission line between the transmitter and the antenna. This circuit measures forward and reflected power from which SWR may be calculated (some meters calculate SWR for you). More advanced units can measure forward and reflected power simultaneously and show these values and SWR at the same time.

An antenna tuner is a device used to cancel out the effects of antenna reactance. Tuners add capacitance to cancel out inductive reactance in the antenna, and vice versa. Simple tuners use variable capacitors and inductors; the operator adjusts them by hand while observing reflected power on the SWR meter until a minimum SWR is reached. The LDG Electronics AT-1000ProII automates this process.

No tuner will fix a bad antenna. If the antenna is far from resonance, the inefficiencies inherent in such operation are inescapable; it’s simple physics. Much of the transmitted power may be dissipated in the tuner as heat, never reaching the antenna at all. A tuner simply “fools” the transmitter into behaving as though the antenna were resonant, avoiding any damage that might otherwise be caused by high reflected power. For best performance, the antenna used should always be as close to resonance as is practical.

	FWD Power (watts)								
REV	20	30	40	50	60	70	80	90	100
2	1.92	1.70	1.58	1.50	1.45	1.41	1.38	1.35	1.33
4	2.62	2.15	1.92	1.79	1.70	1.63	1.58	1.53	1.50
6	3.42	2.62	2.26	2.06	1.92	1.83	1.75	1.70	1.65
8	4.44	3.14	2.62	2.33	2.15	2.02	1.92	1.85	1.79
10	5.83	3.73	3.00	2.62	2.38	2.22	2.09	2.00	1.92
12	7.87	4.44	3.42	2.92	2.62	2.41	2.26	2.15	2.06
14	11.24	5.31	3.90	3.25	2.87	2.62	2.44	2.30	2.20
16	17.94	6.42	4.44	3.60	3.14	2.83	2.62	2.46	2.33
18	37.97	7.87	5.08	4.00	3.42	3.06	2.80	2.62	2.47
20		9.90	5.83	4.44	3.73	3.30	3.00	2.78	2.62
22		12.92	6.74	4.94	4.07	3.55	3.21	2.96	2.77
24		17.94	7.87	5.51	4.44	3.83	3.42	3.14	2.92
26		27.96	9.32	6.17	4.85	4.12	3.65	3.32	3.08
28		57.98	11.24	6.95	5.31	4.44	3.90	3.52	3.25
30			13.93	7.87	5.83	4.79	4.16	3.73	3.42
32			17.94	9.00	6.42	5.18	4.44	3.95	3.60
34			24.63	10.40	7.09	5.60	4.75	4.19	3.80
36			37.97	12.20	7.87	6.07	5.08	4.44	4.00
38			77.99	14.60	8.80	6.60	5.44	4.71	4.21
40				17.94	9.90	7.19	5.83	5.00	4.44
42				22.96	11.24	7.87	6.26	5.31	4.68
44				31.30	12.92	8.65	6.74	5.65	4.94
46				47.98	15.08	9.56	7.27	6.02	5.22
48				97.99	17.94	10.63	7.87	6.42	5.51
50					21.95	11.92	8.55	6.85	5.83

THE LDG AT-1000PROII

In 1995, LDG Electronics pioneered a new type of automatic antenna tuner. The LDG design uses banks of fixed capacitors and inductors, switched in and out of the circuit by relays under microprocessor control. An additional relay switches between high and low impedance ranges. A built-in SWR sensor provides feedback; the microprocessor searches the capacitor and inductor banks, seeking the lowest possible SWR. The tuner is a “Switched L” network, consisting of series inductors and parallel capacitors. LDG chose the L network for its minimum number of parts and its ability to tune unbalanced loads, such as coax-fed dipoles, verticals, Yagis, and, in fact, virtually any coax-fed antenna.

The series inductors are switched in and out of the circuit, and the parallel capacitors are switched to ground under microprocessor control. The high/low impedance relay switches the capacitor bank either to the transmitter side of the inductor bank, or to the antenna side. This allows the AT-1000ProII to handle loads that are either greater than or less than 50 ohms. All relays are sized to carry 1000 watts continuously. The relays are non-latching, so power is required to “hold” the current match.

The SWR sensor is a variation of the Bruene circuit. This SWR measuring technique is used in most dual-meter and direct-reading SWR meters. Slight modifications were made to the circuit to provide voltages instead of currents for the analog-to-digital converters that provide signals proportional to the forward and reflected power levels. The single-lead primary through the center of the sensor transformer provides RF current sampling. Diodes rectify the sample and provide a DC voltage proportional to RF power. These two voltages are read by the ADCs in the microprocessor and are used to compute SWR in real time.

Although the microprocessor’s oscillator runs at 32 MHz, which allows the main tuning routine to execute in only a few milliseconds, the relays require several milliseconds of settling time for every combination of inductors and capacitors. Thus, it may take several seconds before all relay combinations are exhausted, in the case of a difficult tune.

The tuning routine uses an algorithm to minimize the number of tuner adjustments. The routine first de-energizes the high/low impedance relay if necessary, and then individually steps through the inductors to find a coarse match. With the best inductor selected, the tuner then steps through the individual capacitors to find the best coarse match. If no match is found, the routine repeats the coarse tuning with the high/low impedance relay energized. The routine then fine tunes the inductors and capacitors. The program checks LC combinations to see if a 1.5:1 or lower SWR can be obtained and stops when it finds a good match.

The microprocessor runs a fine tune routine just after the tuner finds a match of 1.5:1 or less. This fine tune routine now tries to make the SWR as low as possible (not just to 1.5); it takes about half a second to run.

QUICK REFERENCE

<i>Button</i>	<i>Primary Function</i>	<i>Func -> Button</i>	<i>Status Check (Func Hold + Button)</i>
Tune	Full Tune (Long Press) Memory Tune (Medium Press) Bypass (Short Press)	Manually Store Tuning Parameters	Display Relay Settings
Ant	Toggle Antenna Selection	Toggle High/Low Impedance	Display High/Low Impedance
C Up	Increase Capacitance	Toggle Peak / Average Power	Display PWR Meter Mode
C Dn	Decrease Capacitance	Toggle Auto / Semi Mode	Display Auto / Semi Selection
L Up	Increase Inductance	Set PWR Meter Scale	Display PWR Meter Scale
L Dn	Decrease Inductance	Set Auto Tuning SWR Threshold	Display Auto Tuning SWR Threshold
Func	Select Secondary Button Functions		

A WORD ABOUT TUNING ETIQUETTE

Be sure to use a vacant frequency when tuning. With today's crowded ham bands, this is often difficult. However, causing interference to other hams should be avoided as much as possible. The AT-1000ProII's very short tuning cycle, as little as a fraction of a second, minimizes the impact of tuning transmissions.

CARE AND MAINTENANCE

The AT-1000ProII tuner is essentially maintenance-free. Power limits in this manual should be strictly adhered to. The outer case may be cleaned as needed with a soft cloth slightly dampened with household cleaning solution. As with any modern electronic device, the AT-1000ProII can be damaged by temperature extremes, water, impact, or static discharge. LDG strongly recommends the use of a good quality, properly installed lightning arrestor in the antenna lead.

TECHNICAL SUPPORT

The LDG customer support staff is ready to answer your product questions by telephone and by e-mail. We know that you will enjoy your product even more knowing LDG is ready to answer your questions as the need arises.

Visit the Support Center at: ldgelectronics.com/support

Our website links you to the on-line Customer Support Center where you can send us a question, do your own research in the LDG Product Knowledge Books, and read through lists of frequently asked product questions. LDG regularly updates on-line information, so the best on-line support information is available all day and every day.

The LDG website provides links to product manuals, just in case you lose this one! When you are thinking about the purchase of other LDG products our website also has complete product specifications and photographs you can use to help make your purchase decision. Don't forget the links to all of the quality LDG Dealers also ready to help you make that purchase decision.

TWO-YEAR TRANSFERRABLE WARRANTY

Your product is warrantied against manufacturer defects in parts and labor for two full years from the date of purchase. This two-year warranty is also transferable. When you sell or give away your LDG product, give the new owner a copy of the original sales receipt and the two-year warranty goes with the new owner.

There is no need to complete a warranty card or to register an LDG product. Your product receipt establishes eligibility for warranty service, so save that receipt. Send your receipt with the product whenever you send your product to LDG for repair. Products sent to LDG without a receipt are considered requests for out-of-warranty repair.

LDG does not guarantee product damage or abuse. This means that a product failure, as determined by LDG, to be caused by the customer or by other natural calamity (e.g., lightning) is not covered under the two-year warranty. Damage can be caused by failure to heed the product's published limitations and specifications or by not following good Amateur practice.

OUT OF WARRANTY SERVICE

If a product fails after the warranty period, LDG wants to help you get it fixed. Send the product to us for repair any time you like. We will determine what needs to be done and contact you with an estimate.

RETURNING YOUR PRODUCT FOR SERVICE

Returning a product to LDG is easy. We do not require a return merchandise authorization. Visit the Customer Support Center: www.ldgelectronics.com/support

Download the LDG Product Repair Form. List all contact information including email address and all details of problems you are experiencing. For warranty service, please include a copy of your purchase receipt. After the unit is received and logged into our service department system, an email will be sent confirming your unit is in process.

Repairs can take three to four weeks but are usually faster. The most recent information on returning products for service is found at the LDG Customer Support Center.

Send your carefully packaged unit with the Repair Form to:

LDG Electronics, Inc.

Attn: Repair Department

1445 Parran Rd

St. Leonard, MD 20685

PRODUCT FEEDBACK

We encourage product feedback! Tell us what you really think of your LDG product. In a card, letter, or email (preferred) tell us how you used the product and how well it worked in your application. Send along a photo or even a schematic or drawing to illustrate your narrative. We like to share your comments with our staff, our dealers, and even other customers at the LDG website.

<http://www.ldgelectronics.com/>

